



A200-A210-A200B-A200BL



PARABREZZA UNIVERSALE
UNIVERSAL WINDSCREEN
PARE-BRISE UNIVERSEL
UNIVERSEL WINDSHILDE
PARABRISAS UNIVERSAL
ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
BAUENLEITUNG - ISTRUCCIONES DE MONTAJE

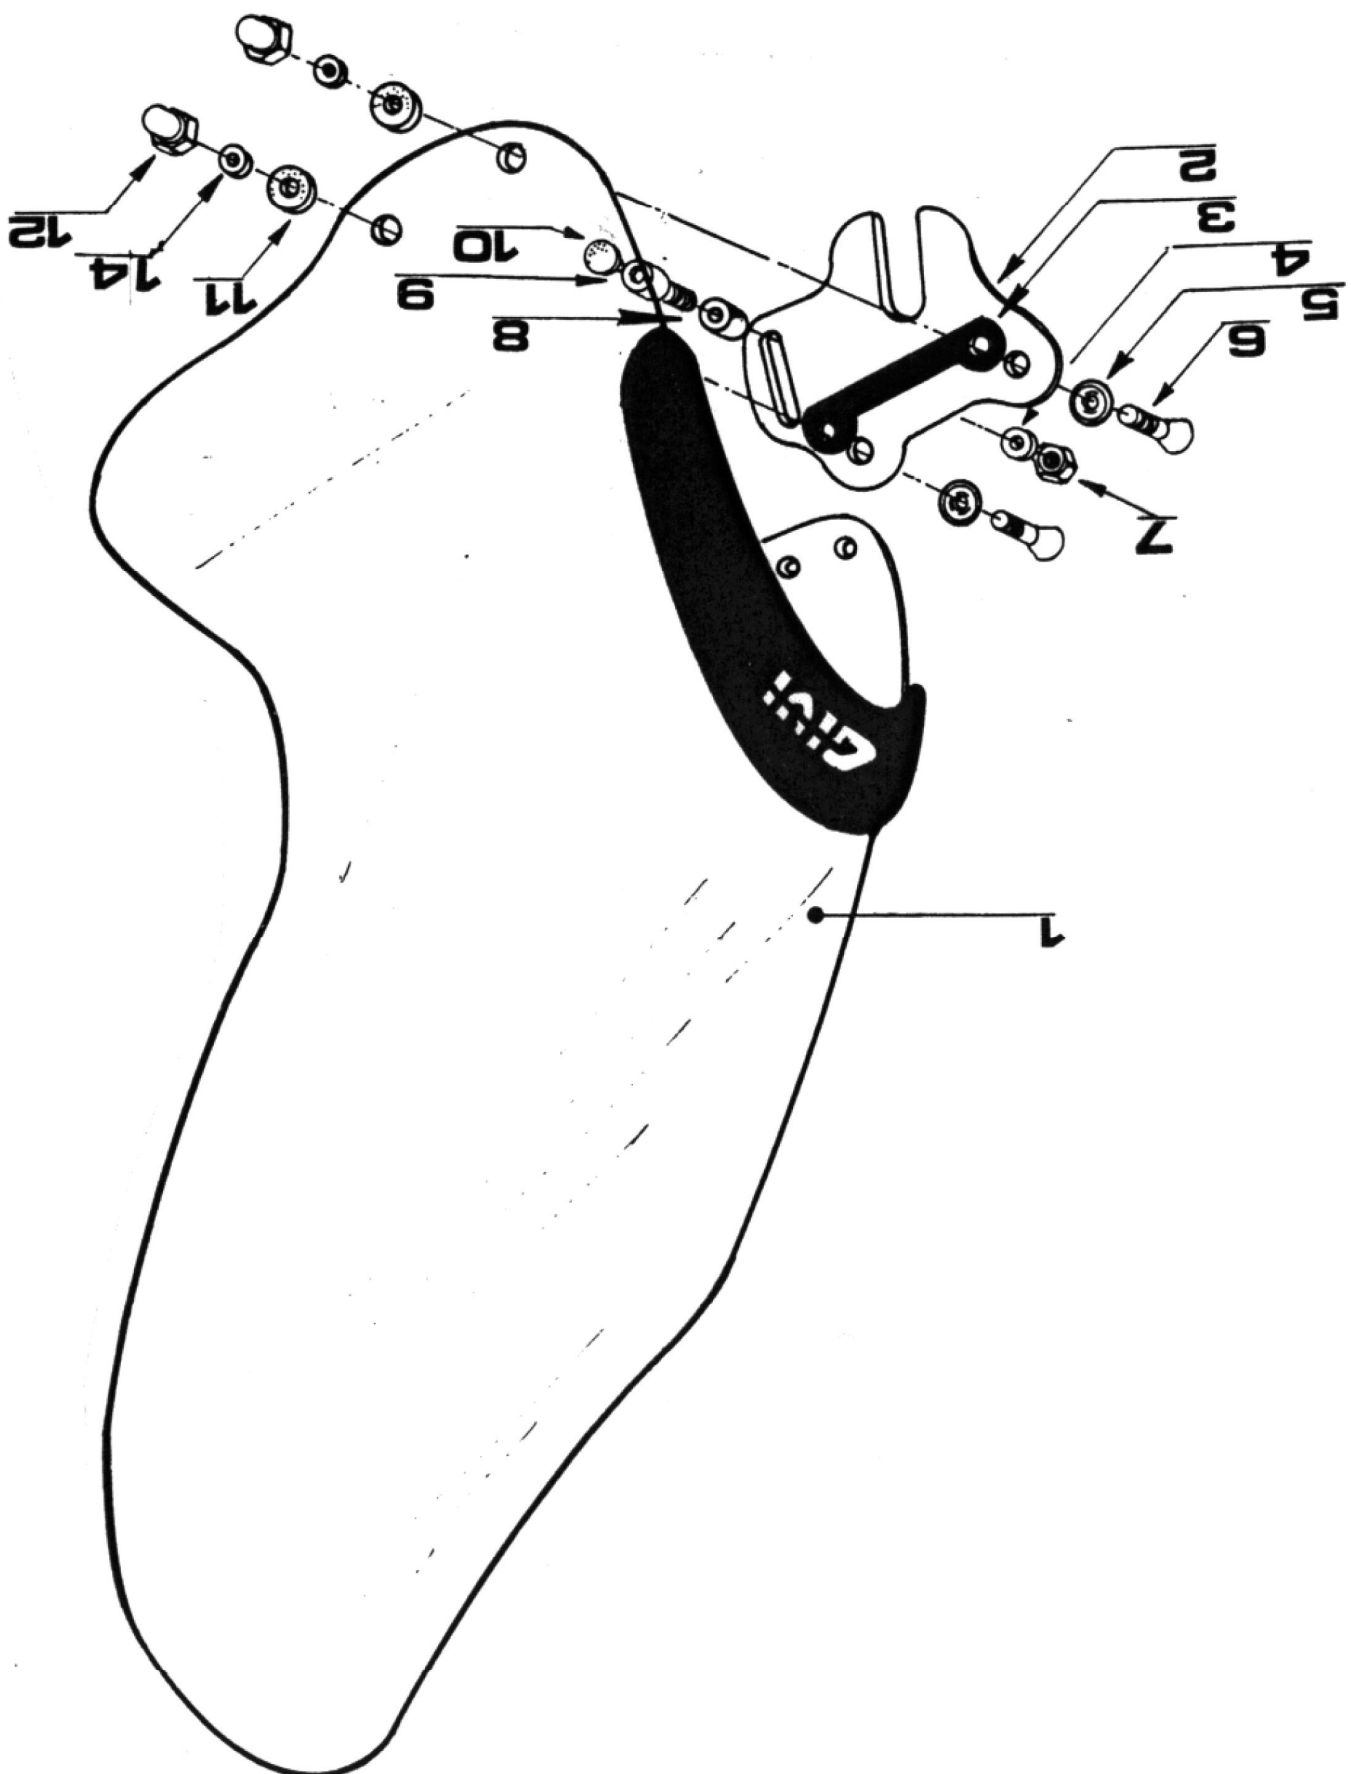

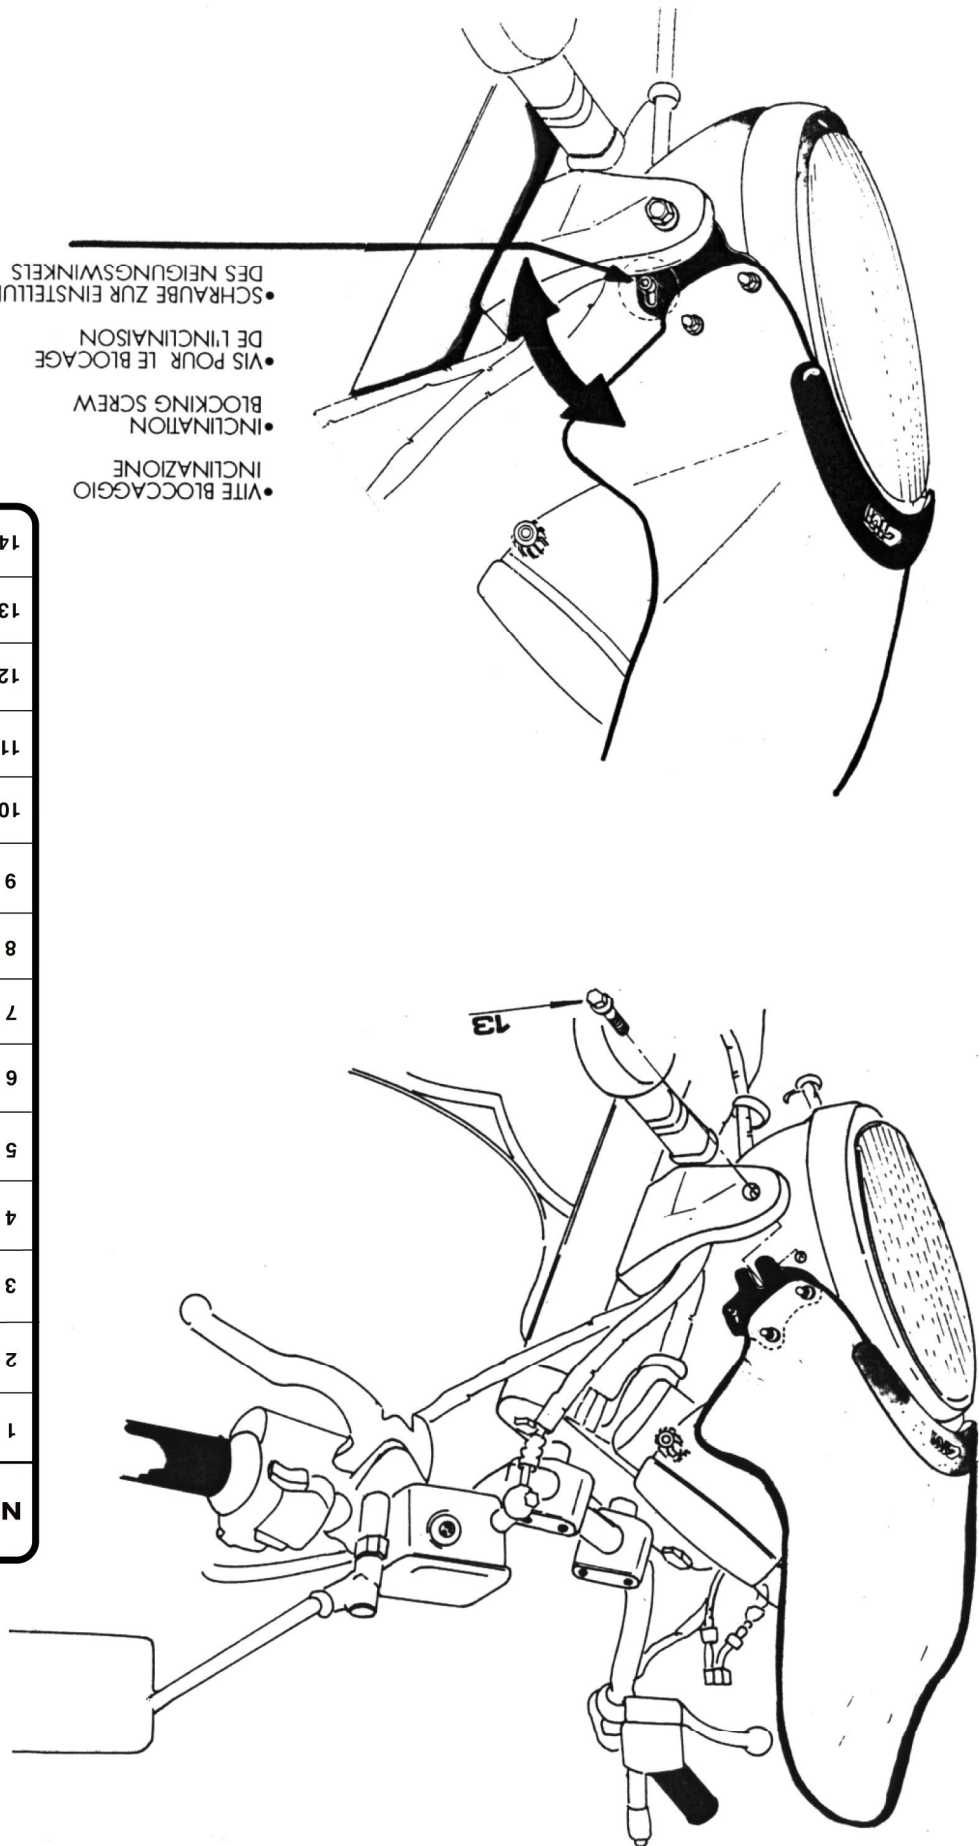

- VITE BLOCCAGGIO INCLINAZIONE
- INCLINATION BLOCKING SCREW
- VIS POUR LE BLOCAGE DE L'INCLINAISON
- SCHRAUBE ZUR EINSTELLUNG DES NEIGUNGSWINKELS

N°	DESCRIZIONE DEL KIT (KIT DESCRIPTION) (BESCHREIBUNG DES BEFESTIGUNGSSKITS) QUANTITÀ (QUANTITY)
1	AIRSTARS PARE-BRISE
2	PIASTRINA INOX (1dx 1 sx) INOX PLATE EDELSTAHLPLATTE
3	GOMMA RUBBER CAOUTCHOUC
4	RONDELLA Ø 6 IN INOX WASHER Ø 6 RONDELLE Ø 6 UNTERLEGSCHIBE
5	RONDELLA SPECIALE SPECIAL WASHER RONDELLE SPECIALE SPEZIAL-UNTERLEGSCHIBE
6	VITE TPSCCI M 6 X 18 INOX SCREW M 6 X 18 VIS M 6 X 18
7	DADO M 6 AUTOBLOC. RIBAS. inox NUT M 6 ECROU M 6 SCHRAUBENMUTTER
8	BUSSOLA INOX Ø 13 X 8 AXLE BOX Ø 13 X 8 RONDELLE SPECIALE DE SEPARATION Ø 13 X 8 EDELSTAHLBUCHSE Ø 13 X 8
9	VITE TCEI M 6 X 10 INOX SCREW M 6 X 10 VIS M 6 X 10
10	TAPPO COPRIVITE NERO COVER SCREW CAP BOUCHON COUVRE VIS SCHRAUBENSTOPSEL
11	RONDELLA IN GOMMA Ø 16 FORO 6 RUBBER WASHER Ø 16 RONDELLE EN CAOUTCHOUC
12	DADO M6 CIECO INOX BLIND NUT M 6 NUT AVEUGLE M 6 BLINDMUTTER
13	VITE ORIGINALE ORIGINAL SCREW VIS ORIGINAL
14	RONDELLA Ø 6 X 16 IN INOX WASHER UNTERLEGSCHIBE